




15-16 POWERSTROKE SWITCH INSTALLATION

STEP 1

ROUTE THE PURPLE AND BLACK WIRES FROM THE SOTF SWITCH THROUGH THE FIREWALL TO THE APPROPRIATE SENSOR AS SHOWN IN THE PICTURES. BE SURE TO ROUTE THE WIRES CAREFULLY, AWAY FROM HOT SURFACES OR MOVING PARTS. ALSO BE SURE TO SECURE WIRES SO THEY WILL NOT RUB ON ANY SHARP EDGES.

STEP 2

UNPLUG THE SENSOR AND CAREFULLY CUT BACK APPROXIMATELY 1.5" OF PROTECTIVE WIRE SHEATHING. BE SURE TO NOT CUT INTO THE ACTUAL WIRES WHEN REMOVING THE PROTECTIVE SHEATHING!

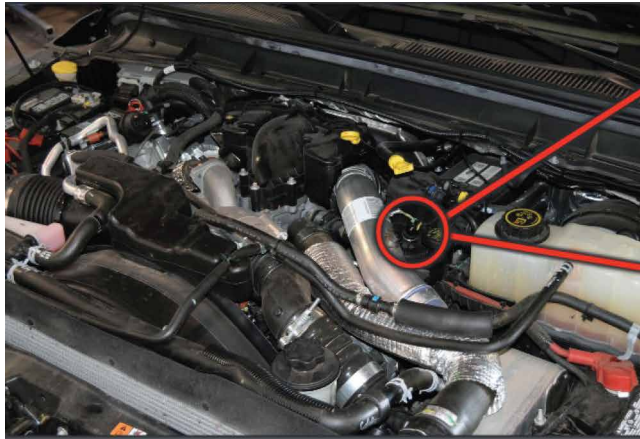


STEP 3

YOUR PINS WILL SLIGHTLY SNAP IN. BE CAREFUL NOT TO BREAK THE LOCKING CLIPS. TUG ON THE WIRE LIGHTLY TO MAKE SURE THEY ARE LOCKED IN.

STEP 4

SPLICE THE PURPLE WIRE FROM THE SOTF SWITCH TO THE GREEN WIRE ON THE SENSOR. SPLICE THE BLACK WIRE FROM THE SOTF SWITCH TO THE GREEN/WHITE-STRIPE WIRE ON THE SENSOR.

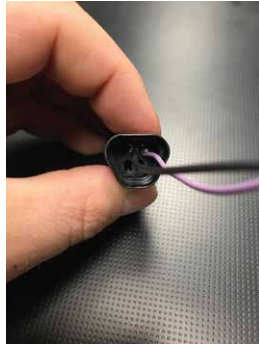

NOTE: GO TO WWW.GDPTUNING.COM FOR HIGH IDLE INSTRUCTION MANUAL