



# LLY SWITCH INSTALLATION

**STEP 1**  
USE C3 GREY CONNECTOR




**STEP 2**  
LIFT GREY LEVER & DETACH  
ALL 3 PLUGS



**STEP 3**  
USE BOTTOM GREY CONNECTOR



**STEP 4**  
REMOVE PIN LOCK

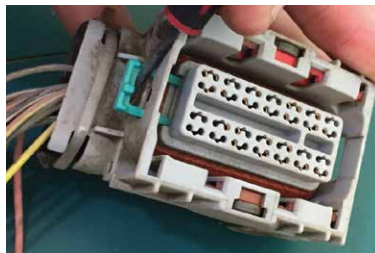


**STEP 5**  
REMOVE BLACK COVER, INSERT  
FLATHEAD SCREWDRIVER INTO  
UNLOCK CLIPS



**STEP 6**  
REMOVE BLACK COVER




**STEP 7**  
TOP VIEW OF CONNECTOR

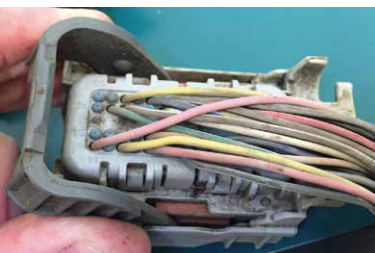

**STEP 8**  
LOCATE CORRECT  
PIN LOCATORS




**STEP 9**

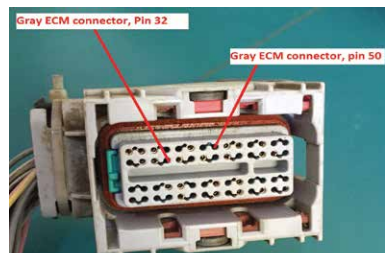

**STEP 10**  
REMOVE PIN FILLER



**STEP 11**  
INSERT PIN & WIRES TO LATCH,  
REINSTALL PIN LOCK

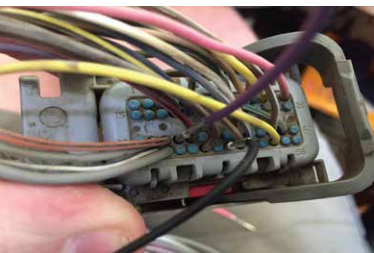

**STEP 12**  
REASSEMBLE CONNECTORS



## STOCK CONNECTOR

SIGNAL = GREY CONNECTOR, PIN 32  
GROUND = GREY CONNECTOR, PIN 50  
HIGH IDLE ENABLE = GREY CONNECTOR, PIN 6  
HIGH IDLE POWER = BLACK CONNECTOR, PIN 12

## GDP TUNING WIRES

SIGNAL = PURPLE  
GROUND = BLACK  
HIGH IDLE ENABLE = BLUE  
HIGH IDLE POWER = PINK